

ATTIPE System Variable — GstarCAD 2027

ATTIPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The ATTIPE system variable is used to control the text format toolbar which displays together with in-place editor when modifying multiple text attributes.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:**display the abbreviated text format tool bar with in-place editor
- 1:** display the full text format tool bar with in-place editor

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)