

CSHADOW System Variable — GstarCAD 2027

CSHADOW System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The CSHADOW system variable is used to set display properties for 3D shadow objects.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 3

System Variable Value:

- 0:** project and receive shadow
 - 1:** project shadow
 - 2:** receive shadow
 - 3:** ignore shadow
- Users should turn the shadow visibility on in viewport to see shadow.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)