

RASTERDPI System Variable — GstarCAD 2027

RASTERDPI System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The RASTERDPI system variable is used to control the paper size and plot scale when changing from dimensional to dimensionless output devices, or vice versa.

Type	Integer
Saved in	Registry
Initial value	300
Range	100 ~ 32767

It can apply on changing from millimeters or inches to pixels, or vice versa.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)