

RASTERPREVIEW System Variable — GstarCAD 2027

3837 · kbadmin · September 25, 2026 · [System Variable Reference](#) · 0 · 20

RASTERPREVIEW System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The RASTERPREVIEW system variable is used to control whether to create and save thumbnail preview images with drawings together.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** do not create thumbnail preview images in drawings
- 1:** create thumbnail preview images in drawings

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3837>