

REBUILDDEGREEV System Variable — GstarCAD 2027

3843 kbadmin September 25, 2026 [System Variable Reference](#) 0 14

REBUILDDEGREEV System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The REBUILDDEGREEV system variable is used to set the degree in V direction when rebuilding NURBS surfaces.

Type	Integer
Saved in	Registry
Initial value	3
Range	2 ~ 11

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3843>