

REBUILDOPTIONS System Variable — GstarCAD 2027

REBUILDOPTIONS System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The REBUILDOPTIONS system variable is used to control the delete and trim options when rebuilding NURBS surfaces.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1,2,3

System Variable Value:

- Vuale:** when users use CVREBUILD
- 0:** do not delete original surfaces and trim area do not apply to new rebuilding objects
 - 1:** delete original surfaces and trim area do not apply to new rebuilding objects
 - 2:** do not delete original surfaces, but trim area applies to new rebuilding objects
 - 3:** delete original surfaces, but trim area applies to new rebuilding objects

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

