

# REBUILDV System Variable — GstarCAD 2027

3846 kbadmin September 25, 2026 [System Variable Reference](#) 0 13

## REBUILDV System Variable

[GstarCAD 2027](#) · [System Variables](#)

### Function Description:

The REBUILDV system variable is used to control the grid number in V direction of rebuilding NURBS surfaces.

|               |           |
|---------------|-----------|
| Type          | Integer   |
| Saved in      | Registry  |
| Initial value | 6         |
| Range         | 2 ~ 32767 |

### Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3846>