

RECOVERAUTO System Variable — GstarCAD 2027

RECOVERAUTO System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The RECOVERAUTO system variable is used to control the display of recover notification before or after opening a damaged drawing file.

Type	Bitcode
Saved in	Registry
Initial value	0
Range	0-7

System Variable Value:

- 0:** display the notification to recover the damaged file when opening it. Any running scripts will be interrupted. After recovery it, displaying another notification to open the recovered drawing file.
- 1:** display the notification to recover the damaged file when opening it. Any running scripts will be interrupted. After recovery it, displaying another notification to open the recovered drawing file.
- 2:** automatically recover damaged file, open the drawing without notification. Display recovered file information under command prompts.
- 4:** disable all display of notifications.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3847>