

VTDURATION System Variable — GstarCAD 2027

VTDURATION System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The VTDURATION system variable is used to set the duration of a smooth view transition in milliseconds.

Type	Integer
Saved in	Registry
Initial value	750
Range	0 ~ 5000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)