

VTENABLE System Variable — GstarCAD 2027

VTENABLE System Variable

[GstarCAD 2027](#) · [System Variables](#)

Function Description:

The VTENABLE system variable is used to control when to use smooth view transition.

Type	Integer
Saved in	Registry
Initial value	3
Range	0 ~ 7

The VTENABLE system variable is used to control when to use smooth view transition.

Setting	For pan/zoom	For rotation	For scripts
0	Off	Off	Off
1	On	Off	Off
2	Off	On	Off
3	On	On	Off
4	Off	Off	On
5	On	Off	On
6	Off	On	On
7	On	On	On

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3862>