

PALETTEOPAQUE System Variable — GstarCAD 2027

PALETTEOPAQUE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PALETTEOPAQUE

Function Description:

The PALETTEOPAQUE system variable is used to control whether palettes can be opaque.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

When the transparency is available and turns on, users can use "Transparency" option in shortcut menu to set transparency for current palettes or all palettes. The transparency may be disabled in the following conditions: palettes or windows are fixed; current operation system does not support transparency.

System Variable Value:

- 0: turn on palettes transparency
- 1: turn off palettes transparency

Note: this system variable can also be found in "Transparency" option in shortcut menu. At the bottom of "Transparency" dialog box, the Disable All Window Transparency (Global) option controls and is controlled by the PALETTEOPAQUE system variable.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3864>