

PDMODE System Variable — GstarCAD 2027

PDMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PDMODE

Function Description:

The PDMODE system variable is used to control how to display point objects.

Type	Integer
Saved in	Drawing
Initial value	0

Values of 0, 2, 3, and 4 provide different geometric representations of point objects. A value of 1 specifies that nothing is displayed.
Specifying the value 32, 64, or 96 specifies a shape to draw around the point, in addition to the geometry drawn through it.
The PDSIZE system variable controls the size of points.
After changing PDMODE and PDSIZE, the appearance of existing points updates the next time that the drawing is regenerated.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

