

PICKFIRST System Variable — GstarCAD 2027

PICKFIRST System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PICKFIRST

Function Description:

The PICKFIRST system variable is used to control whether need to select objects before starting the command.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** off. Only select objects after starting the command.
- 1:** on. Users can also select objects before starting the command.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3880>