

PICKSTYLE System Variable — GstarCAD 2027

PICKSTYLE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PICKSTYLE

Function Description:

The PICKSTYLE system variable is used to control the use of group selection and associative hatch selection.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1,2,3

System Variable Value:

- 0:** do not use the group selection and associative hatch selection.
- 1:** use the group selection
- 2:** use the associative hatch selection.
- 4:** use the group selection and associative hatch selection.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3881>