

PLOTOFFSET System Variable — GstarCAD 2027

PLOTOFFSET System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PLOTOFFSET

Function Description:

The PLOTOFFSET system variable is used to control whether the plot offset is relative to printable area or edges of papers.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** the plot offset is relative to printable area
- 1:** the plot offset is relative to edges of papers

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3888>