

POLARMODE System Variable — GstarCAD 2027

POLARMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > POLARMODE

Function Description:

The POLARMODE system variable is used to set for polar tracking and object snap tracking.

Type	Bitcode
Saved in	Registry
Initial value	0

The setting is stored as a bitcode using the sum of listed system variable values.

Polar angle measurements

- 0: measure polar angle based on current UCS(absolute)
- 1: measure polar angle from selected objects(relative)

Object snap tracking:

- 0: track orthogonally only
- 1: use polar tracking settings in object snap tracking

Use other polar tracking angles:

- 0: no
- 4: yes

Acquire object snap tracking points:

- 0: acquire automatically
- 8: press SHIFT to acquire

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3895>