

PREVIEWTYPE System Variable — GstarCAD 2027

PREVIEWTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PREVIEWTYPE

Function Description:

The PREVIEWTYPE system variable is used to control which viewport will use the drawing thumbnail preview.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** use last saved view
- 1:** use the main view

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3901>