

PROJMODE System Variable — GstarCAD 2027

PROJMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PROJMODE

Function Description:

The PROJMODE system variable is used to set the current Projection mode for trimming or extending.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1,2

System Variable Value:

- 0:** no projection
- 1:** project to the XY plane of current UCS
- 2:** project to current view plane

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3905>