

PSTYLEMODE System Variable — GstarCAD 2027

PSTYLEMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PSTYLEMODE

Function Description:

The PSTYLEMODE system variable is used to specify whether the current drawing is in color dependent plot style or named plot style.
(Read-Only)

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0:** the current drawing is in named plot style
- 1:** the current drawing is in color dependent plot style

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3914>