

PUBLISHALLSHEETS System Variable — GstarCAD 2027

PUBLISHALLSHEETS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > P System Variables > PUBLISHALLSHEETS

Function Description:

The PUBLISHALLSHEETS system variable is used to control whether to load the active file content or load all opened file content in Publish dialog box.

Type	Integer
Saved in	User-setting
Initial value	1
Range	0,1

System Variable Value:

- 0:** only load current file content(layout and model space) to publish list automatically
- 1:** load all opened file content (layout and model space) to publish list automatically

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3917>