

CAMERADISPLAY System Variable — GstarCAD 2027

CAMERADISPLAY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CAMERADISPLAY

Function Description:

The CAMERADISPLAY system variable is used to turn on or turn off the display the camera object displaying.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0:** turn off the display of camera profile
- 1:** turn on the display of camera profile

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3922>