

CAMERAHEIGHT System Variable — GstarCAD 2027

CAMERAHEIGHT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CAMERAHEIGHT

Function Description:

The CAMERAHEIGHT system variable is used to set default height for new camera object.

Type	Real
Saved in	Drawing
Initial value	0.0000

The height is expressed by units of current drawing.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)