

CBARTRANSPARENCY System Variable — GstarCAD 2027

3926 kbadmin September 25, 2026 [System Variable Reference](#) 0 11

CBARTRANSPARENCY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CBARTRANSPARENCY

Function Description:

The CBARTRANSPARENCY system variable is used to control the transparency of constraint bar.

Type	Integer
Saved in	Registry
Initial value	50
Range	10 ~ 90

The CBARTRANSPARENCY system variable is range from 10 to 90. The larger the value, the more opaque the constraint bar.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3926>