

CELWEIGHT System Variable — GstarCAD 2027

CELWEIGHT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CELWEIGHT

Function Description:

The CELWEIGHT system variable is used to set new object lineweight.

Type	Integer
Saved in	Drawing
Initial value	-1
Range	-1,-2,-3,0,5,9,13,15,18,20,25,30,35,40,50,53,60,70,80,90,100,106,120,140,158,200,211

All values must be entered in hundredths of millimeters.

System Variable Value:

- 1: set the lineweight to be BYLAYER
- 2: set the lineweight to be BYBLOCK
- 3: set the lineweight to be DEFAULT. The DEFAULT value is determined by LWEDFAULT system variable.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3932>