

CENTEREXE System Variable — GstarCAD 2027

CENTEREXE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CENTEREXE

Function Description:

The CENTEREXE system variable is used to control the length of the centerline extensions.

Type	Real
Saved in	Drawing
Initial value	0.1200 (imperial) or 3.5000 (metric)

NOTE: The CENTEREXE system variable applies only to the length of centerline extensions created with the CENTERMARK and CENTERLINE commands. This system variable only accepts positive real numbers.