

CENTERLAYER System Variable — GstarCAD 2027

CENTERLAYER System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CENTERLAYER

Function Description:

The CENTERLAYER system variable is used to specify a default layer for new center marks or centerlines.

Type	String
Saved in	Drawing
Initial value	"use current"

The CENTERLAYER system variable applies only to center marks and centerlines created with the CENTERMARK and CENTERLINE commands.

Values other than the "." (use current) value override the current layer (CLAYER system variable).