

CENTERLTSCALE System Variable — GstarCAD 2027

CENTERLTSCALE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CENTERLTSCALE

Function Description:

The CENTERLTSCALE system variable is used to set the linetype scale used by center marks and centerlines.

Type	Real
Saved in	Drawing
Initial value	1.0000

The CENTERLTSCALE system variable applies only to center marks and centerlines created with CENTERMARK and CENTERLINE commands.

This system variable accepts any real number except zero.