

CENTERMARKEXE System Variable — GstarCAD 2027

CENTERMARKEXE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CENTERMARKEXE

Function Description:

The CENTERMARKEXE system variable is used to determine whether centerlines extend automatically from new center marks.

Type	Switch
Saved in	Drawing
Initial value	1

The CENTERMARKEXE system variable applies only to center marks created using the CENTERMARK command.

System Variable Value:

- 0:** Hides the centerlines extending from a center mark.
- 1:** Displays the centerlines extending from a center mark.