

CENTERMT System Variable — GstarCAD 2027

CENTERMT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CENTERMT

Function Description:

The CENTERMT system variable is used to control the text displaying in center horizontal when stretching by grips.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

The CENTERMT can not be applied on the Mtext that stretched by the rule in in-place text editor.

System Variable Value:

- 0:** when moving corner grips in centered multiple line text, the center grip moves in the same direction, but the opposite grip keeps in place
- 1:** when moving corner grips in centered multiple line text, the center grip keeps in place, but both sets of side grips move in the stretch direction

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3941>