

CHAMFERB System Variable — GstarCAD 2027

CHAMFERB System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CHAMFERB

Function Description:

The CHAMFERB system variable is used to set the first chamfer distance when CHAMMODE has set to be 0.

Type	Real
Saved in	Drawing
Initial value	0.0000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)