

CHAMMODE System Variable — GstarCAD 2027

CHAMMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CHAMMODE

Function Description:

The CHAMMODE system variable is used to set the entry methods for CHAMFER.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0: need two chamfer distances
- 1: need one chafer distance and one angle

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

