

CMDACTIVE — GstarCAD 2027

CMDACTIVE

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CMDACTIVE

Function Description:

The CMDACTIVE system variable is used to specify which one is active, common commands, transparency command, script or dialog box.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	Unknown
Range	0,1,2,4,8,16,32,64

The setting is stored as a bitcode using the sum of listed system variable values.

System Variable Value:

- 0: no active command
- 1: common command active
- 2: transparency command active
- 4: script active
- 8: dialog box active
- 16: DDE active

32: AutoLISP active (Only for commands defined by ObjectARX)
64: ObjectARX commands active drawing

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3954>