

CMDDIA System Variable — GstarCAD 2027

CMDDIA System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CMDDIA

Function Description:

The CMDDIA system variable is used to the display of in-place editor when executing LEADER and QLEADER commands.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** turn off
- 1:** turn on

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3955>