

# COMPASS System Variable — GstarCAD 2027

## COMPASS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > COMPASS

### Function Description:

The COMPASS system variable is used to control whether the compass to be on or off.

|               |           |
|---------------|-----------|
| Type          | Integer   |
| Saved in      | Not saved |
| Initial value | 0         |
| Range         | 0,1       |

### System Variable Value:

- 0: turn off
- 1: turn on

### Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

