

CONSTRAINTBARDISPLAY System Variable — GstarCAD 2027

3965 kbadmin September 25, 2026 [System Variable Reference](#) 0 11

CONSTRAINTBARDISPLAY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CONSTRAINTBARDISPLAY

Function Description:

The CONSTRAINTBARDISPLAY system variable is used to control the display of constraint bar for the following geometric constraint application and the display of hidden constraint for selected objects.

Type	Bitcode
Saved in	Registry
Initial value	3
Range	0 ~ 3

System Variable Value:

- 0:** automatically hide constraint bar after applying geometric constraint
- 1:** display constraint bar for the selected geometrically constrained objects
- 2:** after selected constrained objects, all hidden constrained objects display no matter geometric constrains or dimension constrains

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3965>