

CONSTRAINTBARMODE System Variable — GstarCAD 2027

3966 kbadmin September 25, 2026 [System Variable Reference](#) 0 16

CONSTRAINTBARMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CONSTRAINTBARMODE

Function Description:

The CONSTRAINTBARMODE system variable is used to control the display of geometric constrains in constrained bar.

Type	Bitcode
Saved in	Registry
Initial value	4095
Range	0 ~ 4095

System Variable Value:

- 1: horizontal
- 2: vertical
- 4: perpendicular
- 8: parallel
- 16:tangent
- 32: smooth
- 64: coincident
- 128: concentric
- 256: collinear
- 512: symmetric
- 1024:equal

2048: fix

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3966>