

CONSTRAINTINFER System Variable — GstarCAD 2027

CONSTRAINTINFER System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CONSTRAINTINFER

Function Description:

The CONSTRAINTINFER system variable is used to control whether to infer geometric constrains when drawing or editing geometric drawings.

Type	Bitcode
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** do not to infer geometric constrains
- 1:** infer geometric constrains

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3967>