

CONSTRAINTSOLVEMODE System Variable — GstarCAD 2027

3969 kbadmin September 25, 2026 [System Variable Reference](#) 0 5

CONSTRAINTSOLVEMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CONSTRAINTSOLVEMODE

Function Description:

The CONSTRAINTSOLVEMODE system variable is used to control constrain actions when applying or editing constrains.

Type	Bitcode
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** not to keep the size of geometric drawing when applying or modifying constrains
1: keep the size of geometric drawing when applying or modifying constrains
When CONSTRAINTSOLVEMODE system variable has set to be 0, the constrained lines may lead to unpredictable result.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3969>