

COPYFORMAT System Variable — GstarCAD 2027

COPYFORMAT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > COPYFORMAT

Function Description:

The COPYFORMAT system variable is used to specify the format for saving objects to the clipboard when copying.

Type	Integer
Saved in	Registry
Initial value	1

System Variable Value:

- 0:** CAD Drawing object.
- 1:** CAD Drawing object/Picture (Metafile).
- 2:** CAD Drawing object/Picture (Metafile)/Bitmap.