

COPYMODE System Variable — GstarCAD 2027

COPYMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > COPYMODE

Function Description:

The COPYMODE system variable is used to control whether to repeat COPY command automatically.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** set to repeat COPY command automatically
- 1:** set to create a single copy by COPY command

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

