

CURSORREVERSE System Variable — GstarCAD 2027

CURSORREVERSE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CURSORREVERSE

Function Description:

The CURSORREVERSE system variable is used to control whether the cross cursor is inverted.

Type	Integer
Saved in	Registry
Initial value	1
Range	01

System Variable Value:

- 0:** The cursor is not inverted and the cursor display is non-transparent.
- 1:** The cursor is inverted and the cursor display is transparent.

Other versions with matching text

[2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3978>