

CURSORSIZE System Variable — GstarCAD 2027

CURSORSIZE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > C System Variables > CURSORSIZE

Function Description:

The CURSORSIZE system variable is used to determine the cursor size by degrees of screen.

Type	Integer
Saved in	Registry
Initial value	5
Range	1% ~100%

The valid range is from 1% to 100%. When setting to 100%, the cursor displays in full screen, users can not see the endpoint of cursor. When setting to smaller than 100%, moving the cursor to the edge of screen, users can see the endpoint of cursor.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)