

# AIDIMFLIPARROW Command — GstarCAD 2027

3990 kbadmin September 25, 2026 [Command Reference](#) 0 9

## AIDIMFLIPARROW Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > A Command > AIDIMFLIPARROW

### Function Description:

This command is used to flip the specified dimension arrow quickly. This command is available for linear dimension, aligned dimension, angular dimension, arc length dimension, radius dimension, diameter dimension and jogged dimension.

### Command Access:

**Icon:** /

**Menu:** /

**Ribbon:** /

**Toolbar:** /

**Command:**

AIDIMFLIPARROW

**Alias:** /

## Command Prompts:

Select object:

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3990>