

ATTSYNC Command — GstarCAD 2027

4028 kbadmin September 25, 2026 [Command Reference](#) 0 20

ATTSYNC Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > A Command > ATTSYNC

Function Description:

This command applies attribute changes in block definitions to all block references of the same name. You can use this command to update instances of blocks containing attributes that were redefined using the BLOCK or BEDIT commands. ATTSYNC does not change any values assigned to attributes in existing blocks. ATTSYNC removes all changes of format or features that are made by ATTEDIT or EATTEDIT commands. And it also deletes all extended data associated with blocks and might affect dynamic blocks and blocks created by third-party applications.

Command Access:

Menu: /

Ribbon: Insert > Block Definition > Synchronize Attributes

Toolbar: /

Command: ATTSYNC

Alias: /

Command Prompts:

Enter an option [?/Name/Select] <Select>:

?

Lists all block definitions in the drawing that contain attributes.

Name

Enter the name of the block whose attributes you want to update.

Select

Specify a block for update by selecting a block reference in the drawing area.

Related References?

- [Commands about Block Attributes](#)

Related Concepts?

- [About Modifying Block Definitions](#)

Related Tasks[?]

- [To Edit Attribute Definitions](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4028>