

BASE Command — GstarCAD 2027

4111 kbadmin September 25, 2026 [Command Reference](#) 0 4

BASE Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > B Command > BASE

Function Description:

This command is used to set the insertion base point for the current drawing. The base point is expressed by the current UCS coordinate.

In order to insert the current drawing to another drawing or take the current drawing as the external reference of another drawing, the base point will be taken as the insertion point.

Command Access:

Menu: Draw > Block > Base Point

Ribbon: Home > Block > Set Base Point

Toolbar: /

Command: BASE

Alias: /

Command Prompts:

Enter base point <0.0000,0.0000,0.0000>:

Related References[?]

- [Commands about Basic Blocks](#)

Related Tasks[?]

- [To Insert a Block](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4111>