

BTABLE Command — GstarCAD 2027

4149 kbadmin September 25, 2026 [Command Reference](#) 0 7

BTABLE Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > B Command > BTABLE

Function Description:

This command is used to store variations of a dynamic block in the Block Properties Table which includes properties such as legacy parameters and user parameters. Each row in the table defines a different variation of the dynamic block.

Command Access:

Menu: /

Ribbon: /

Toolbar: /

Command: BTABLE

Alias: /

Command Prompts:

Specify parameter location or [Palette]:

Display property in Properties palette? [Yes/No]< current >:

Enter number of grips[0/1]< current >:

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4149>