

BURST Command — GstarCAD 2027

4151 kbadmin September 25, 2026 [Command Reference](#) 0 7

BURST Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > B Command > BURST

Function Description:

This command is used to explode selected blocks, preserving the block layer and converting attribute values to text objects. The component objects are placed on the layer of the block and do not revert to their original layers. The values of any attribute objects are preserved by converting them to text objects. The exploded attributes assume the original attribute definition's layer and style.

Command Access:

Menu: Express > Blocks > Explode Attributes to Text

Ribbon:

Express > Blocks > Explode Attributes to Text

Toolbar: ET: Blocks Tools >

Explode Attributes to Text

Command: BURST

Alias: /

Command Prompts:

Select object:

Operation Steps:

1.Select a block containing two attributes:

2.Block exploded and attribute values converted to text:

Related Tasks?

- [To Work With Express Tools](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4151>