

# BVSTATE Command — GstarCAD 2027

4154 kbadmin September 25, 2026 [Command Reference](#) 0 14

## BVSTATE Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > B Command > BVSTATE

### Function Description:

This command is used to create, set or remove visibility states from dynamic blocks. The [Visibility States dialog box](#) is displayed. You can only use the BVSTATE command in the Block Editor after a visibility parameter has been added to the block definition.

### Command Access:

**Menu:** /

**Ribbon:** Block Editor > Visibility > Visibility States

**Toolbar:** BE: Manage > Visibility States

**Command:** BVSTATE

**Alias:** BVS

### Command Prompts: /

---

## Related References?

- [Commands about Dynamic Blocks](#)

## Related Tasks?

- [To Set Up a New Visibility State in a Dynamic Block](#)
- [To Rename or Delete a Visibility State](#)
- [To Change the Visibility of Objects in the Current Visibility State](#)

## Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4154>