

Block Attribute Manager Dialog Box — GstarCAD 2027

4158 kbadmin September 25, 2026 [Command Reference](#) 0 14

Block Attribute Manager Dialog Box

[GstarCAD 2027](#) · [Command Reference](#)

Commands > B Command > BATTMAN > Block Attribute Manager

Function Description:

The Block Attribute Manager is used to manage the attribute of specified blocks in the current drawing. Users can edit attribute definitions, remove attributes from blocks and change the attribute order when prompting users to insert. Attributes of the selected block are displayed in the attribute list. Users can specify items displaying in the list by "Settings". According to each selected block, it will display number in the current drawing and current space in the description part of attribute list. Double-click an attribute to display the Edit Attributes dialog box, where you can modify attribute properties.

Dialog Box Options:

Select block

Clicks this button, users can select block in the drawing by pointing device. After clicking it, the Block Attribute Manager dialog box temporarily closes, it will not pop up until users select blocks or press ESC. If users have modified attributes of a block, they want to select a new block without saving all changes; it will prompt to save all changes before selecting other blocks.

Block

Lists all block definitions that contain attributes in the current drawing. If users want to change block attributes, they can select the block in the list.

Attribute list

Displays each attribute of the selected block.

Found in drawing

Number of the selected block in the current drawing.

Found in model space

Number of the selected block in the current model space or layout.

Sync

Synchronizes all blocks with the same customized attribute properties as currently selected block. All attribute values in each block will not change.

Move Up

Moves the selected attribute tag in the earlier stage. The Move Up button is not available when a constant attribute is selected.## **Move Down** Moves the selected attribute tag in the later stage. The Move Down button is not available when a constant attribute is selected.## **Edit**Click "Edit" button to display "Edit Attributes" dialog box, from which users can modify attribute properties.

Remove

Removes the selected attributes from block definition. Selecting “Apply changes to existing references” option in “Block Attribute Settings” dialog box and then selecting “Remove”, all attributes of blocks will be removed from

the current drawing. This option will not be available for blocks with one attribute.## **Settings**

Click “Settings” button to display “Block Attribute Settings” dialog box, from which users can customize attribute list style in Block Attribute Manager.

Apply

Applies all changes. The dialog box does not close.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4158>