

CHANGETEXT Command — GstarCAD 2027

4184 kbadmin September 25, 2026 [Command Reference](#) 0 17

CHANGETEXT Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > C Command > CHANGETEXT

Function Description:

When there are several texts in the drawing which need to be modified, it will be much more tedious and inefficient to modify them one by one.

The CHANGETEXT command allows users to make bulk modifications to several texts. For example, this function can modify the alignment, height, width, position, rotation, style and content of several texts simultaneously. It greatly improves the efficiency of single text and Mtext modifications.

Command Access:

Menu: Text > Change Text

Ribbon: Express > Texts > Change Text

Toolbar: ET: Texts Tools > Change Text

Command: CHANGETEXT

Alias: /

Command Prompts:

Please select
object:

Then select the text to be modified, immediately a prompt message will be displayed.

Height(H)/Justify(J)/Location(L)/Rotation(R)/Style(S)/Text(T)/Undo(U)/Width(W):

Height

Changes the text height. Within this option there are three more:

Single(I)/List(L)/<New Height for all objects>:

- Single: This changes the text height one by one.
- List: This shows the text information such as: Min. and Max. text height and average.
- New Height for all objects: This changes the height of the selected text at once.

Justify

Changes the text justification. Within this option there are several more:

Align(A)/Fit(F)/Center(C)/Left(L)/Middle(M)/Right(R)/TL/TC/TR/ML/MC/MR/BL/BC/BR/<?>:

- Align: This aligns text according to a specific point.

- Fit: Adjust the length of a single text by specifying two points.
- Center: Justify the context at the center of the frame area text.
- Left: Justify the context at the left of the frame area text.
- Middle: Justify the context at the middle of the frame area text.
- Right: Justify the context at the right of the frame area text.
- TL: Justify the context at the top left of the frame area text.
- TC: Justify the context at the top center of the frame area text.
- TR: Justify the context at the top right of the frame area text.
- ML: Justify the context at the middle left of the frame area text.
- MC: Justify the context at the middle center of the frame area text.
- MR: Justify the context at the middle right of the frame area text.
- BL: Justify the context at the bottom left of the frame area text.
- BC: Justify the context at the bottom center of the frame area text.
- BR: Justify the context at the bottom right of the frame area text.

Location

Changes the text location by selecting and moving the text frame base point.

Rotation

Changes the text rotation according to the input value.

Style

Changes the text style by typing the style name in the command line.

Text

Finds and replaces text. Within this option there are three more:

[Single(I)/Re-enter(R)/Global(G)]:<Global>

- Single: If you select one or more texts, this will match and change any context within the text selected in sequence (one by one).
- Re-enter: This retypes a new content by typing it in the command line and then replaces it.
- Global: If you select one or more text, this will match and change any context within a text group selected at once.

Undo

Like CTRL+Z, this will undo an operation after selecting any other.

Width

Changes the frame area text by entering a new width factor value.

Related Tasks[?]

- [To Work With Express Tools](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4184>